

Fig. 4

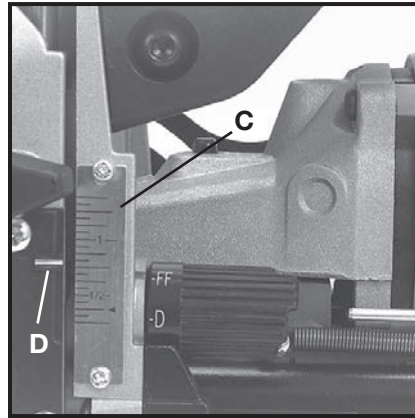


Fig. 5

## ADJUSTABLE FENCE

Model 557 is equipped with an integral, adjustable fence which:

- Provides micro height adjustment, distance scale includes indexes to top of cut, to center of cut, and to bottom of cut.
- Tilts 0° through 135°, with an adjustable stop at 90°.
- Does not have to be removed to make “flush” cuts.

### Height Adjustment (see Figs. 4 & 5)

1. Loosen locking knob (A), and rotate knob (B) to position the fence as desired, (rotate knob clockwise to raise fence, rotate knob counterclockwise to lower fence).
2. The depth scale (C), indicates the distance from the top edge of the workpiece to the blade:
  - The line across the center of the index block (D), indicates the distance to the center of the blade.
  - The top edge of the index block (D), indicates the distance to the bottom of the blade.
  - The bottom edge of the index block (D), indicates the distance to the top of the blade.
3. Once fence is in desired position, tighten knob (A), to secure in place.

### Angle Adjustment (see Figs. 6, 7, 8 & 9)

1. Loosen locking knob (A).
2. For angles between 0° and 90°: swing fence downward until desired angle on lower scale (B), aligns with lower index mark (E). Tighten knob (A), to secure in place.
3. For angles between 90° and 135°: swing fence downward until the “gate” between the upper scale (D), and lower scale (B), aligns with locking knob. Swing scale arm down to align knob with upper scale. Move fence until desired angle on upper scale (D), aligns with upper index mark (C). Tighten knob (A), to secure in place.